

# Easy-to-use remote access software for any Integral Technologies CCTV system

## RemoteView

### Digital Video Remote Viewing Software

Systems grow and change rapidly in every business. The solutions that are right for your business today, may not support your challenges in the years to come. With Integral Technologies' RemoteView software, you never need to worry about outgrowing your system in the future. RemoteView allows users to view live and recorded video from any Integral Technologies DVMS unit on a Windows®-based remote client computer via a network or modem. RemoteView is easy to install and operate from a desktop computer or a laptop. Virtually any number of users can access the system simultaneously with RemoteView.




#### Features

- ◆ Connect remotely to any Integral digital video management system through network or modem
- ◆ Full remote administration of DVX 500, DVX 1000, DVXe and DVXi systems
- ◆ Simultaneous connections to multiple systems
- ◆ Multiple simultaneous client connections to each system (one Administrator plus multiple Users)
- ◆ Viewing of live video in choice of ten video window configurations

#### Features

- ◆ Control PTZ cameras remotely
- ◆ Easy, quick search and playback of recorded video
- ◆ Search for activity in specific area of camera view (e.g., door opening), also known as SmartSearch
- ◆ Export video in XPV, AVI, and self-extracting EXE file formats (for easy portability and safe keeping of video clips)
- ◆ Export still images in bitmap or JPEG format
- ◆ Time/date stamp on all exported still images
- ◆ Camera tours across multiple systems
- ◆ Scale level settings for faster download
- ◆ Data rate throttling (limits bandwidth usage over network/modem connection)
- ◆ View video at a lower frame rate while recording images at a higher frame rate
- ◆ Automatic alarm display (recorded alarm video immediately appears on screen)
- ◆ Include time/date stamp on exported clips and printouts

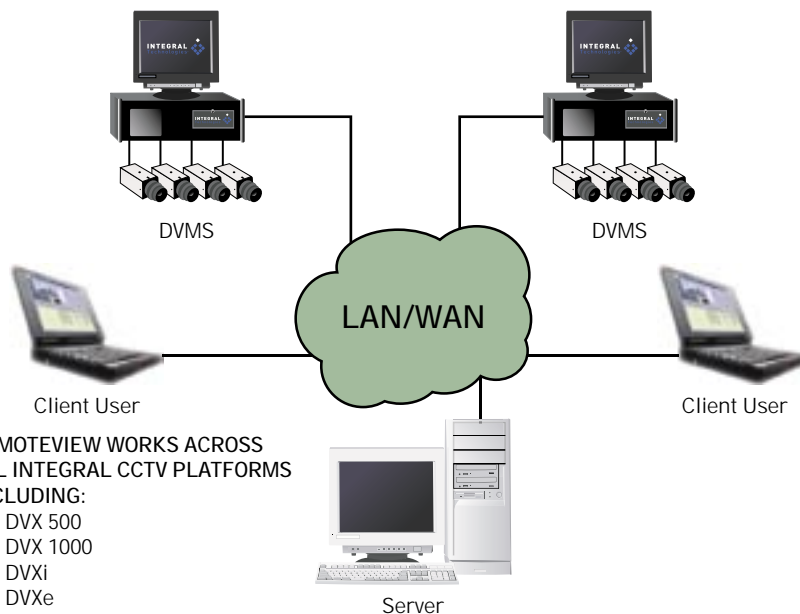

REMOTEVIEW WORKS ACROSS ALL INTEGRAL CCTV PLATFORMS INCLUDING:

- ◆ DVX 500
- ◆ DVX 1000
- ◆ DVXi
- ◆ DVXe
- ◆ DS XPress
- ◆ DS Enterprise

# RemoteView

## RemoteView Administration

RemoteView provides almost all of the same configuration capabilities included in the local DVR configuration pages. Hardware settings, user permissions, alarms, recording schedules, and other settings can be controlled remotely by valid administrators. RemoteView also contains the Server Setup tab, which allows you to view version info, throttle bandwidth usage between the server and client, download the log file, and more. All configuration changes are applied to the server within one minute of implementation.



## Specifications

### SYSTEM REQUIREMENTS

- ◆ Intel P-III 833MHz
- ◆ 256 MB RAM
- ◆ 16-bit color monitor
- ◆ 800×600 resolution
- ◆ Windows XPe/2000/XP (Home or Professional)

## RemoteView Remote Search

RemoteView allows you to search and play back video instantly from multiple cameras on multiple Integral DVRs. The SmartSearch feature searches for video that exhibits motion in a user-specified region of a camera's view. Export still images in bitmap or JPEG format, or video clips as an AVI file, or self-extracting executable. A user configurable time/date stamp can be applied to exported still images, video files and printouts.



## RemoteView Live Monitor

RemoteView allows you to view live video from a remote client computer, with expanded window configurations up to 4x4. You can view cameras from multiple Integral DVRs simultaneously and control pan/tilt/zoom functionality.



## RemoteView Remote Alarm Management

RemoteView automatically displays alarm events next to live video on the Alarms page. All alarms that occur after you connect to a server are listed by server name, camera name, date of occurrence, time of occurrence, current alarm state, and so on. Simply click an alarm event entry to view the event, even if it is still in progress, while keeping an eye on live video from the same camera.

